





- FR** Thermostat programmable radio
- EN** Wireless programmable thermostat
- DE** Programmierbarer Funkthermostat
- ES** Termostato programable radio
- IT** Termostato programmabile radio
- PT** Termóstato programável via rádio

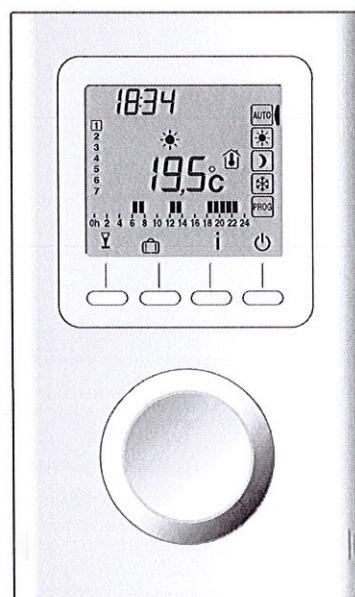


Contents

| | |
|--|-----------|
| 1. Installation | 35 |
| 2. Description | 36 |
| 3. Wireless association | 37 |
| 4. Configuration | 38 |
| CF01 - Correcting the temperature measured | 38 |
| CF02 - Temperature displayed in AUTO mode | 38 |
| CF04 - Control type | 39 |
| CF05 - Energy saving mode | 39 |
| CF06 - ON/OFF button display in standby mode | 39 |
| CF07 - Backlighting | 39 |
| CF08 - Opening detection function | 40 |
| CF09 - Presence detection function | 40 |
| CF10 - Value of the max. comfort setting | 40 |
| CF11 - Programming format | 40 |
| CF12 - Time display format | 41 |
| CF13 - Automatic change to summer/winter time | 41 |
| CF15 - Display of the symbol  | 41 |
| CF16 - Display of the  symbol (heating request) | 41 |
| CF17 - Display of the symbol  | 42 |
| CF18 - Display of the displayed | 42 |
| 5. Setting the clock | 43 |
| 6. Setting the temperatures (settings) | 44 |
| 6.1 Defining the comfort setting | 44 |
| 6.2 Defining the Economy setting | 44 |
| 6.3 Defining the Frost protection setting | 44 |

| | |
|---|-----------|
| 6.4 Behavioural indicator | 45 |
| 7. Programming | 46 |
| 8. AUTO mode | 48 |
| 9. "Party" mode..... | 49 |
| 10. Absence mode | 50 |
| 11. External override | 51 |
| 12. Information button..... | 52 |
| 13. Locking access to the settings | 53 |
| 14. Off mode..... | 53 |
| 15. Return to initial settings..... | 54 |
| 15.1 Automatic reset of parameters to factory setting | 54 |
| 15.2 Initialisation of all the parameters | 55 |
| 16. Remove the wireless association..... | 56 |
| 17. Changing the batteries..... | 57 |
| 18. Troubleshooting | 57 |
| 19. Technical characteristics | 58 |

EN

1. Installation

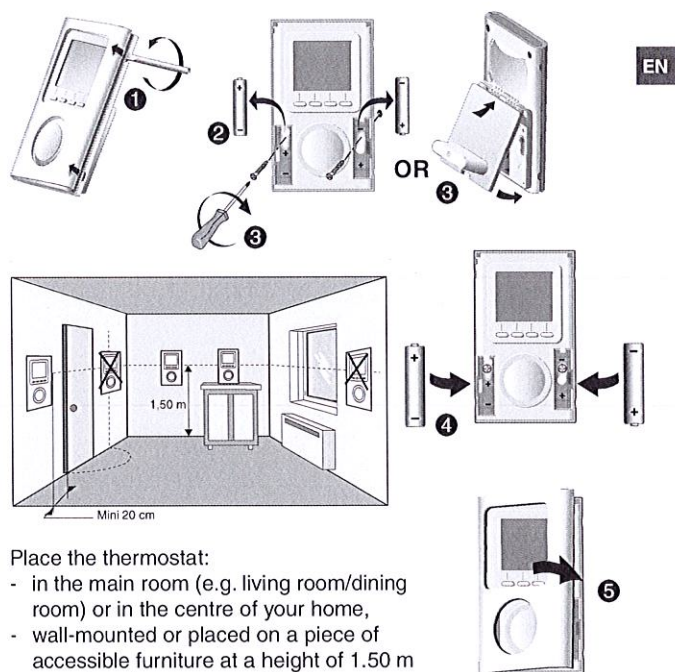


Place the thermostat:

- in the main room (e.g. living room/dining room) or in the centre of your home,
- wall-mounted or placed on a piece of accessible furniture at a height of 1.50 m
- away from heat sources (fireplaces, sunlight) and draughts (windows, doors)

IMPORTANT: Do not install the thermostat on a wall in contact with the outdoors or with an unheated room (e.g. garage, etc.).


2. Description

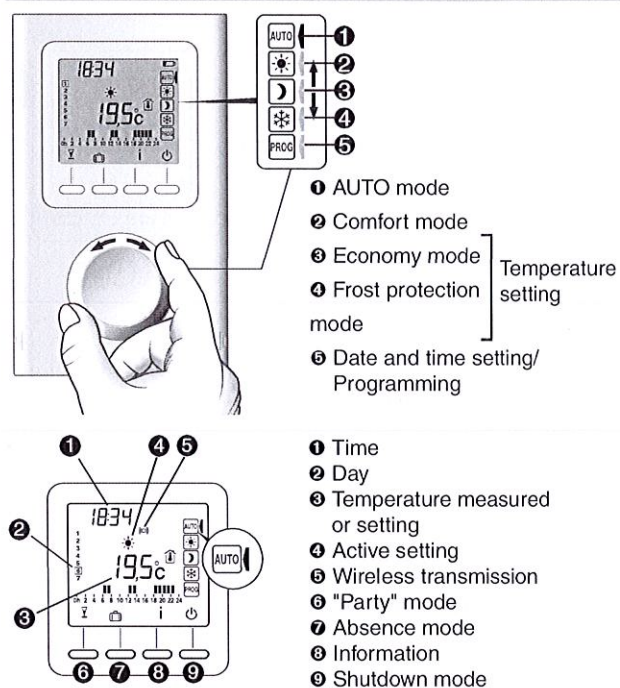


Standby mode:

The product switches to standby mode after a certain time without any activity. Activate the product by pressing a button or turning the selector knob

3. Wireless association



4. Configuration

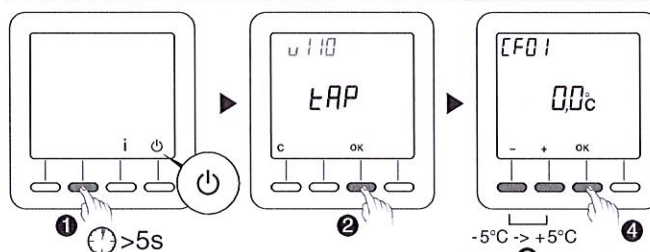

The thermostat must be in shutdown mode.

❶ Press and hold the 2nd button from the left for 5 seconds.

The screen displays the thermostat version.

❷ Press OK.

The screen displays the CF01 menu.

❸ Choose your selection or setting with + and -.

Press OK to validate and go to the next setting.

To exit the mode, turn the selector knob

Note: the greyed out sections of the tables match the default values


CF01 - Correcting the temperature measured

Can be set from -5°C to +5°C.

Example: the temperature displayed by the unit is 19°C and the actual temperature (thermometer) is 20°C, set +1°C.

CF02 - Temperature displayed in AUTO mode

| | |
|---|----------------------|
| 0 | Temperature setting |
| 1 | Temperature measured |

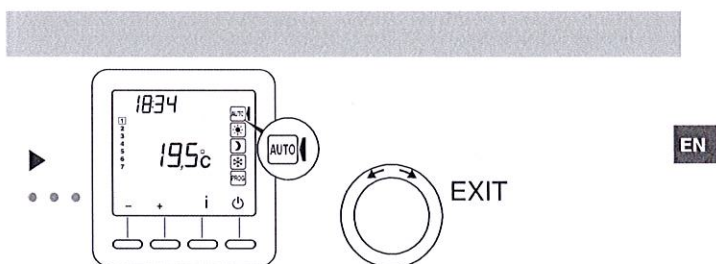



CF04 - Control type

| | |
|---|----------------------------------|
| 0 | Chrono-proportional (PI) control |
| 1 | ON/OFF control |

CF05 - Energy saving mode

| | |
|---|---|
| 0 | Display switches off after 10 seconds if nothing is pressed |
| 1 | Display switches off between midnight and 5am |
| 2 | Display always on |

CF06 - ON/OFF button display in standby mode

| | |
|---|--|
| 0 | Symbol  not displayed in standby mode |
| 1 | Symbol  displayed in standby mode |

CF07 - Backlighting

| | |
|---|------------------------------------|
| 0 | Disabled |
| 1 | Enabled (switches off after timer) |

4. Configuration

CF08 - Opening detection function

| | |
|---|----------|
| 0 | Disabled |
| 1 | Enabled |

If a door/window magnetic contact (e.g. window) is associated with the receiver, the heating will switch to Frost protection when the window is opened.

CF09 - Presence detection function

| | |
|---|----------|
| 0 | Disabled |
| 1 | Enabled |

If a motion detector is associated with the receiver, the temperature will be lowered automatically in the event of an extended absence:

- 1.5 h -> Active setting -1.5°C
- 3.5 h -> Active setting -3.5°C
- 48 h -> Frost protection setting

CF10 - Value of the max. comfort setting

Can be set from 22°C to 30°C.
Default value: 28°C

CF11 - Programming format

| | |
|---|----------------------------|
| 0 | Programming in 1 h steps |
| 1 | Programming in 1/2 h steps |

CF12 - Time display format

| | |
|---|------------|
| 0 | 12 (AM/PM) |
| 1 | 24 |

EN

CF13 - Automatic change to summer/winter time

| | |
|---|----------|
| 0 | Disabled |
| 1 | Enabled |

If CF13 = 0, the date setting will not be proposed.

CF15 - Display of the symbol

| | |
|---|--|
| 0 | Symbol always steady even for a presence detection event |
| 1 | Symbol flashes if there is a presence detection event |

If CF08 = 1:

CF16 - Display of the Δ symbol (heating request)

| | |
|---|----------------------|
| 0 | Symbol not displayed |
| 1 | Symbol displayed |

4. Configuration


CF17 - Display of the symbol

| | |
|---|---|
| 0 | Symbol steady if there is a presence detection event |
| 1 | Symbol flashes if there is a presence detection event |

CF18 - Display of the displayed


| | |
|---|----------|
| 0 | Disabled |
| 1 | Enabled |

If the display of the the consumption is enabled, specify the power of the heating elements

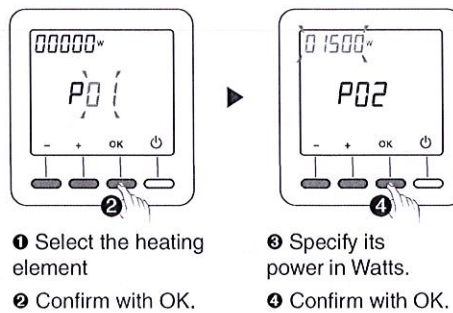

5. Setting the clock

- ❶ Turn the selector knob to PROG.

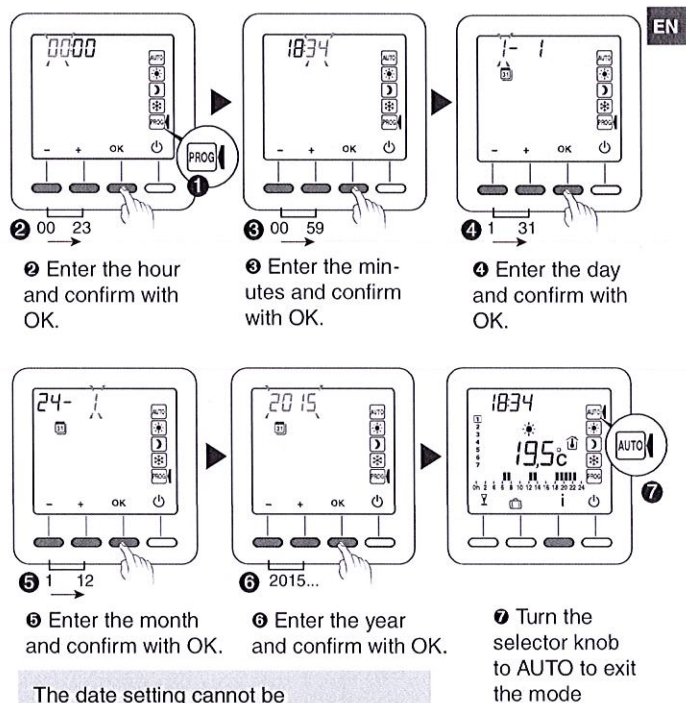


The date setting cannot be proposed (see CF13 configuration).

6. Setting the temperatures (settings)

If you remain in one of these modes, the thermostat will operate permanently in relation to this setting (no programming)


6.1 Defining the comfort setting

- 1 Turn the selector knob to ☀.
- 2 Set the Comfort temperature (5°C to max. Comfort). Configuration CF10
- 3 Confirm with OK.

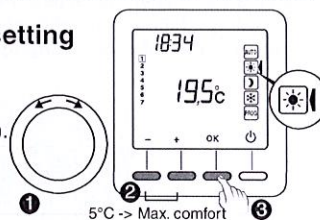


6.2 Defining the Economy setting

- 1 Turn the selector knob to ☾.
- 2 Set the Economy temperature (5°C to max. Comfort).
- 3 Confirm with OK.

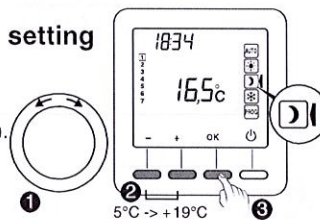


6.3 Defining the Frost protection setting

- 1 Turn the selector knob to ❄.
- 2 Set the Frost protection temperature (5°C to max. Comfort).
- 3 Confirm with OK.

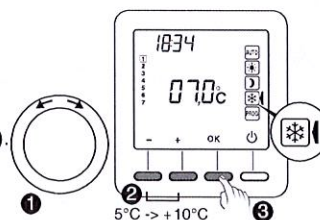

6.4 Behavioural indicator

When the settings are adjusted, depending on the thermostat model, the colour of the screen changes or an indicator is displayed according to the selected temperature. **EN**

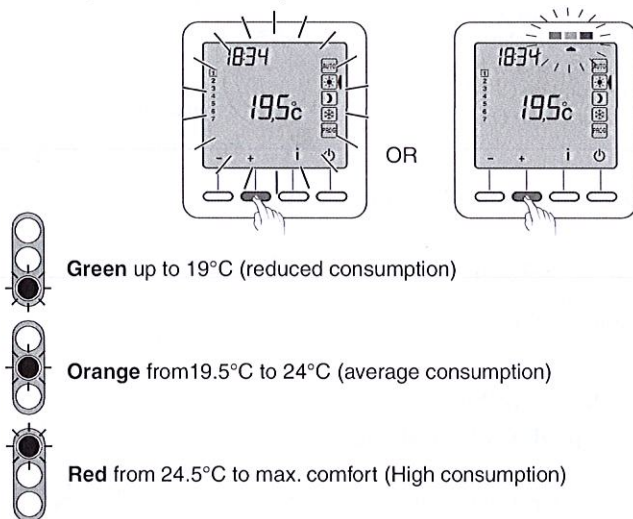

To benefit from this function, according to the thermostat model, activate the backlighting function (CF05).


7. Programming

- 1 Turn the selector knob to **PROG.**


Upon activation, the programming for each day is a comfort period from 6am to 11pm.

You can create your different Economy and Comfort periods using the ☀ and 🌙 buttons.

Example: Comfort from 6am to 8am and 5pm to 11pm

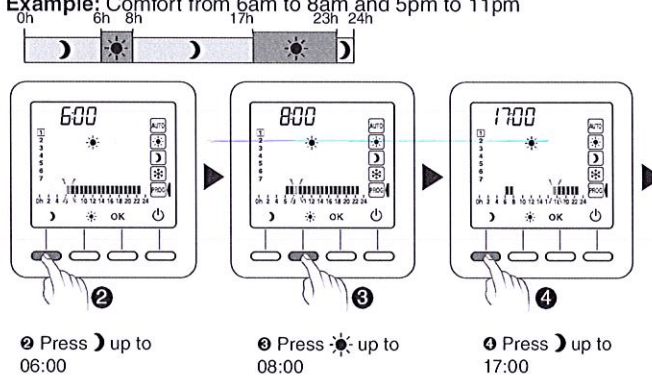


Programming can be made by steps of 1 hour or 1/2 hour (configuration menu CF11).

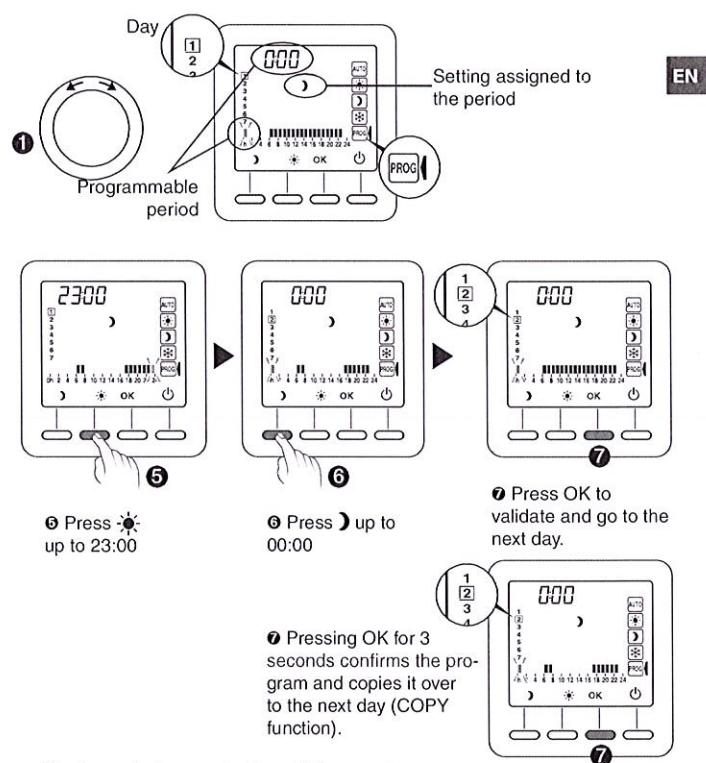





Start again for each day of the week.


8. AUTO mode











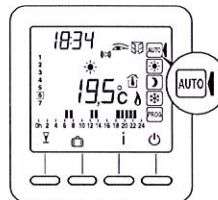In AUTO mode, the thermostat follows the programme of the day.

The  symbol indicate a heating request (configuration CF16).

The automatic programme can be temporarily suspended by:

- a "Party Mode" override (),
- an Absence mode (),
- a window magnetic contact (symbol ), if the function is activated (configuration CF08). The heating then goes to Frost Protection.
- an absence detection (symbol  off), if the function is activated (configuration CF08). The heating then goes to "lower":
 - Absence 1.5 -> Active setting -1.5°C
 - Absence 3.5 -> Active setting -3.5°C
 - Absence 48 h -> Frost-protection




| | | | |
|---|---------------------------------------|---|----------------------------------|
|  | : Heating request |  | : Presence detection in progress |
|  | : Party mode |  | : External override |
|  | : Absence mode |  | : Spent battery |
|  | : Temperature measured |  | : Radio transmission |
|  | : Outdoor temperature | | |
|  | : Door/window magnetic contact active | | |


9. "Party" mode

The "Party" mode can temporarily suspend the automatic programme by applying a temperature setting chosen for a programmed duration (from 30 minutes to 12 hours).

EN

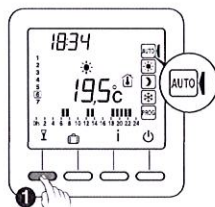


❶ From the **AUTO** mode and press the **Y** button.

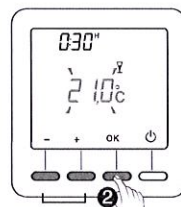

5°C-> Max. comfort

❷ Set the required temperature. Confirm with **OK**.

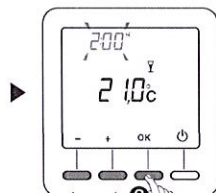

0h30-> 12h

❸ Set the required duration. Confirm with **OK**.




❹ The countdown starts. Return to **AUTO** mode and its settings at the end of the countdown by pressing **C**.

10. Absence mode

This mode protects your home from frost if you are absent for several days.


Example: Leave on Friday 10 - Scheduled return on Sunday 19, programme 9 days absence.

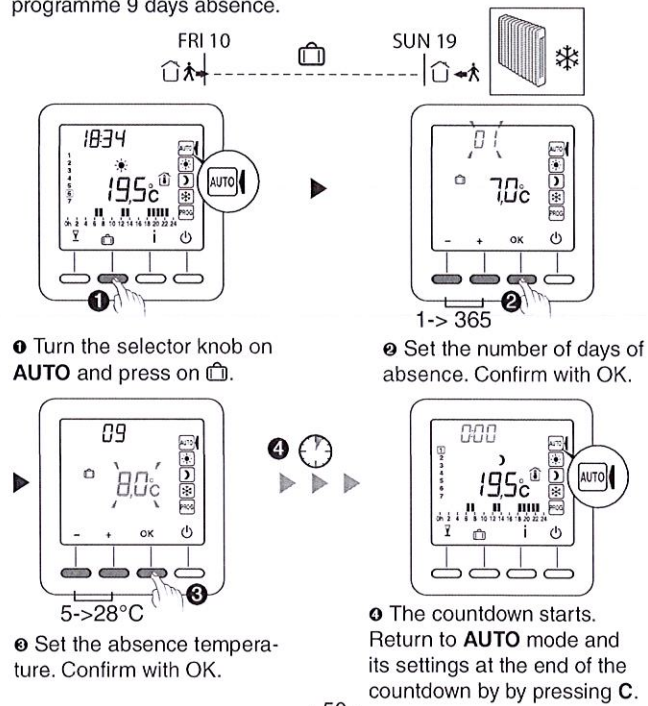


11. External override


The external override is used to suspend the automatic operation of the thermostat from another wireless transmitter allowing this function.

EN

For an external override, the symbol  and the new override value are displayed.

Thermostat follows the parameters demanded by the external transmitter.

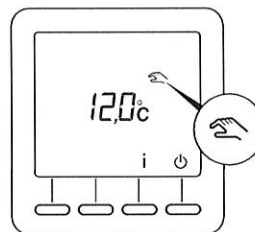



During the external override, if the symbol  does not appear on the thermostat screen, press the i button or turn the selection knob to refresh the display.

12. Information button


The Information button (i) enables the following the information to be known:

- actual temperature setting or temperature measured (according to configuration),
- outside temperature (if the receiver is associated with an outdoor sensor),
- the total consumption of the associated heating elements (configuration CF18).

Repeatedly press the i button to display this information.

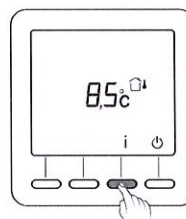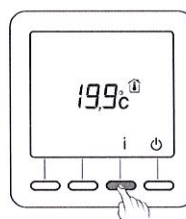

To reset the reading counter, press the C button 3 times.

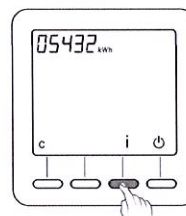


13. Locking access to the settings

From the AUTO, ☀, 🌙, ❄ modes.

Press and hold the **i** button for 5 seconds.
The **🔒** symbol appears.

In locked mode, only the
On/Off (🔌) and Information (i) buttons are accessible.

To enable the beeps again, press
the **i** button for 5 seconds.
The **🔒** symbol appears.

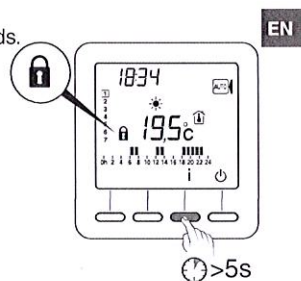


14. Off mode

Press (🔌).
The thermostat emits a series of 3 beeps.

In this mode, heating is shut down.

To exit the shutdown mode, press
again on the (🔌) button.
The thermostat emits a beep.

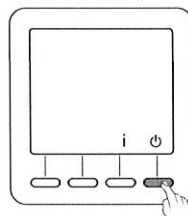


In this mode, heating is shut down.
Only the **i** button can be accessed.

15. Return to initial settings

15.1 Automatic reset of parameters to factory setting

From the shutdown mode (⏻).


❶ Press the left button and the **i** button simultaneously for 10 seconds until "Init" is displayed.

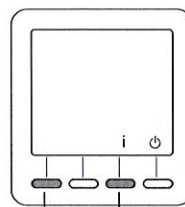

❷ Press and hold the OK button for 3 seconds. The "Init" information flashes.

List of settings initialised:

- Temperature settings (Comfort 19°C, Economy 15.5°C, Frost protection 7°C),
- Opening detection function (CF08=1),
- Presence detection function (CF09=0),

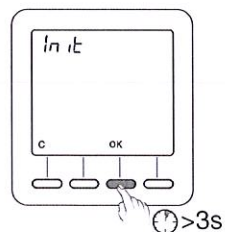

15. Return to initial settings


15.2 Initialisation of all the parameters

This mode resets all the configuration parameters, settings, and programming. Only the date and time are kept.


EN

From the shutdown mode (⏻).


- 1 Press the left button and the i button simultaneously for 20 seconds. After 10 seconds, the screen displays "Init", keep pressing until "ALL" is displays.

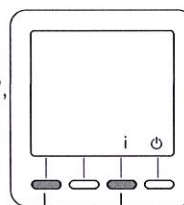

- 2 Press and hold the OK button for 3 seconds. The "Init" and "ALL" information flashes. The values and settings are initialised.

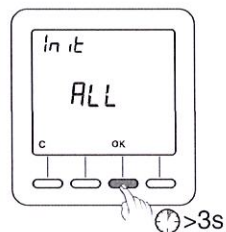


16. Remove the wireless association.

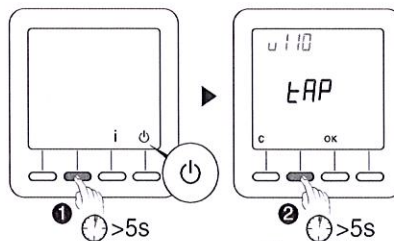


- ❶ The thermostat must be in shutdown mode.
Press and hold the 2nd button from the left for 5 seconds.
The screen displays the thermostat version.

- ❷ Press and hold the 2nd button from the left for 5 seconds again.
The screen displays the rF01 menu.

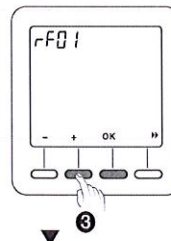


- ❸ Press + to display rF03, then press OK.
The number of receivers found and associated is displayed in the centre of the screen.

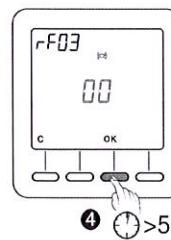


- ❹ Press OK for 5 seconds.
The thermostat removes the wireless associations until "00" is displayed.

17. Changing the batteries

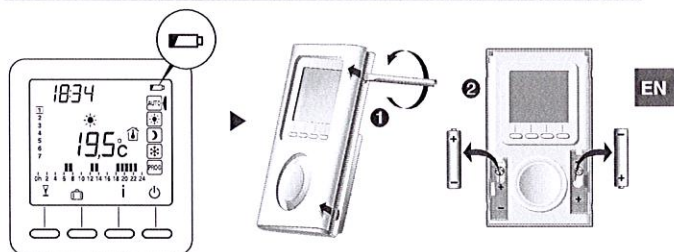

From the moment the symbol is displayed on the screen, you have 3 months to change the batteries (see technical characteristics).

18. Troubleshooting

- **The screen displays the  symbol.**
The batteries are spent. Replace the batteries
- **A receiver does not receive information from the thermostat.**
The radio range may be insufficient.
 - 1) Disconnect all your receivers, apart from the one causing the problem.
 - 2) The thermostat must be in shutdown mode.
 - 3) Press and hold the 2nd button from the left for 5 seconds. *The screen displays the thermostat version.*
 - 4) Press and hold the 2nd button from the left for 5 seconds again. *The screen displays the rF01 menu.*
 - 5) Press + to display rF02.
The screen displays a number from 0 to 4 (4 being the maximum range). If the number is too low, modify the installation.

19. Technical characteristics

- Power according to model:
 - Two 1.5 V LR03/AAA alkaline batteries (supplied), 5-year life under normal use (CF05=0), *lithium*
 - Two 1.5 V, 1.5 Ah LR03/AAA ~~alkaline~~ batteries (supplied), 10-year life under normal use (CF05=0),
- Class III insulation
- 868 MHz transmission frequency, class 1 (standard EN 300 220)
- Wireless remote control device
- Wireless range from 100 to 300 metres outside, varies depending on the associated equipment (the range can vary depending on the installation conditions and the electromagnetic environment).
- Dimensions: 81 x 135 x 22 mm
- Protection index: IP 30
- Wall-mounted on on base
- Installation in an environment with normal pollution levels
- Storage temperature: -10°C to +70°C
- Operating temperature: 0°C to +40°C

